

ITEM NO.	PART NO.	PART NO.	PART NO.	PART NO.	PART NO.	DESCRIPTION	QTY	TRUX ACCESSORIES			
1	M7331022SD	M7331024SD	M7331025SD	M7331033SD	M7331034SD	SUN VISOR PANEL	1	TITLE: SUN VISOR FREIGHTLINER(MID ROOF) COLUMBIA & CENTURY UP TO 2004			
2	M7331022SG	M7331024SG	M7331025SG	M7331033SG	M7331034SG	SUN VISOR PANEL	1				
3	K7331033-BH	-	-	-	-	HARDWARE KIT INCLUDES	17				
4	-	-	-	-	-	PR9331033-D00	1	SIZE	DWG. NO. TSUN-F22, TSUN-F21		
5	-	-	-	-	-	PR9331033-C00	1				
6	-	-	-	-	-	PR9331033-G00	1	NAME DATE REV DATE			
7	-	-	-	-	-	WELL NUT 1/4NC	4				
8	-	-	-	-	-	HEX NUT 1/4-20NC	13	DRAWN BY P.W. 01-02-2007 PH1 -			
9	-	-	-	-	-	HARDWARE KIT INCLUDES:	1				
10	-	-	-	-	-	HEX. BOLT 1/4NC X 1	4	SCALE: 1:16 WEIGHT: LBS SHEET: 1 OF 1			
11	-	-	-	-	-	LOCK WASHER 1/4" SS	17				
12	-	-	-	-	-	TRUSS PHILIPS 1/4"-20NCX3/4"SS	13				

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR, RETAIN CENTER AND SIDES HARDWARE.
- 2- INSTALL THE CENTER BRACKETS ONTO THE CAB USING THE RETAINED HARDWARE.
- 3- TEMPORARILY INSTALL THE SUN VISOR ONTO THE CAB AS ILLUSTRATED.
- 4- USING THE SUN VISOR, MARK BRACKETS MISSING HOLES ON CAB.

CAUTION






REMOVE BRACKETS BEFORE DRILLING TO PREVENT DAMAGE

- 5- DRILL MARKED HOLES AT ϕ 1/2" (.500").
- 6- INSERT THE WELLNUTS.
- 7- IF WITHOUT LIGHTS; SKIP TO STEP #12.
- 8- INSTALL THE LIGHTS ON SUN VISOR
- 9- CONNECT THE LIGHTS AND DIRECT WIRE TOWARDS CENTER.
- 10- FASTEN THE SUN VISOR AS ILLUSTRATED.
- 11- INSTALL AND CONNECT THE CENTRAL LIGHT TO THE OTHERS.
- 12- REINSTALL THE SUN VISOR ONTO THE CAB AS ILLUSTRATED.

CAUTION

IT IS THE RESPONSIBILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.

- 13- CONNECT LIGHTS HARNESS TO THE TRUCK.
- 14- USE THE RETAINED HARDWARE TO SCREW BOTH SIDES.
- 15- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

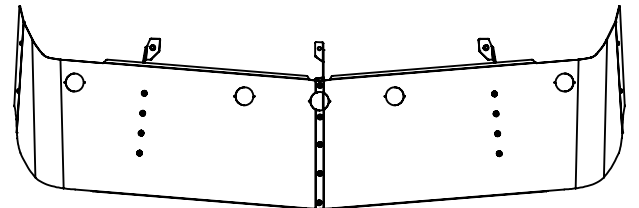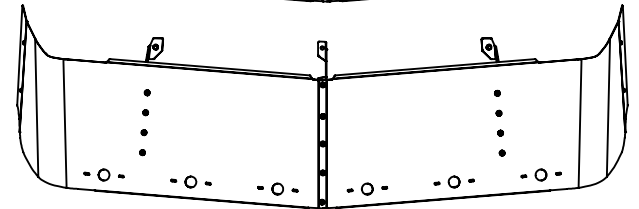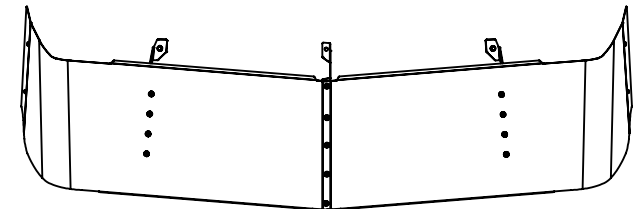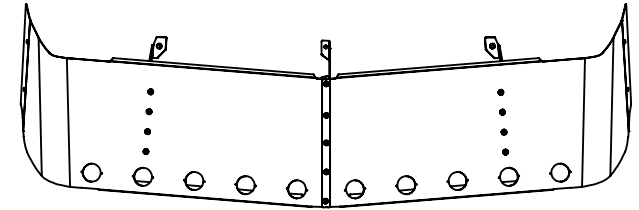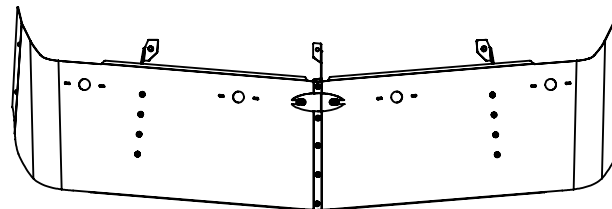

TRUX ACCESSORIES

TITLE:
SUN VISOR FREIGHTLINER (MID ROOF)
COLUMBIA & CENTURY UP TO 2004

SIZE DWG. NO.

A **TSUN-F22, TSUN-F21**

NAME	DATE	REV	DATE
DRAWN BY P.W.	01-02-2007	PH1	-

SCALE: 1:24

WEIGHT: LBS

SHEET: 1 OF 1