

BEFORE BEGINNING INSTALLATION, READ ALL INSTRUCTIONS

INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR.
- 2- INSTALL THE BRACKETS IN THE EXISTING HOLES ONTO THE CAB, USING THE EXISTING HARDWARE.
- 3- MARK BRACKETS MISSING HOLES ON CAB.

ATTENTION

REMOVE BRACKETS TO PREVENT DAMAGE

- 4- DRILL BRACKETS MISSING HOLES AT 1/2 IN, AND INSERT WELLNUTS.
- 5- REINSTALL BRACKETS.
- 6- TEMPORARILY INSTALL THE SUN VISOR ONTO THE BRACKETS.
- 7- AT BOTH ENDS REMOVE DOOR GASCKETS AND PUSH THE SUN VISOR IN PLACE AND MARK HOLES IN DOOR FRAME.

ATTENTION

REMOVE SUN VISOR TO PREVENT DAMAGE

- 8- DRILL THE PREVIOUSLY MARKED OUT HOLES AT 25/64" (.390625") IN. DIA.
- 9- INSERT THE THREADED INSERTS.
- 15- REINSTALL THE SUN VISOR ON THE CAB.
- 17- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.




TRUX ACCESSORIES

TITLE:
SUN VISOR STERLING
9500 SERIE

SIZE DWG. NO
A **TSUN-S1**

NAME	DATE	REV	DATE
DRAWN BY P.W.	09-08-2007	PH1	-
SCALE: 1:16	WEIGHT: LBS	SHEET: 1 OF 1	

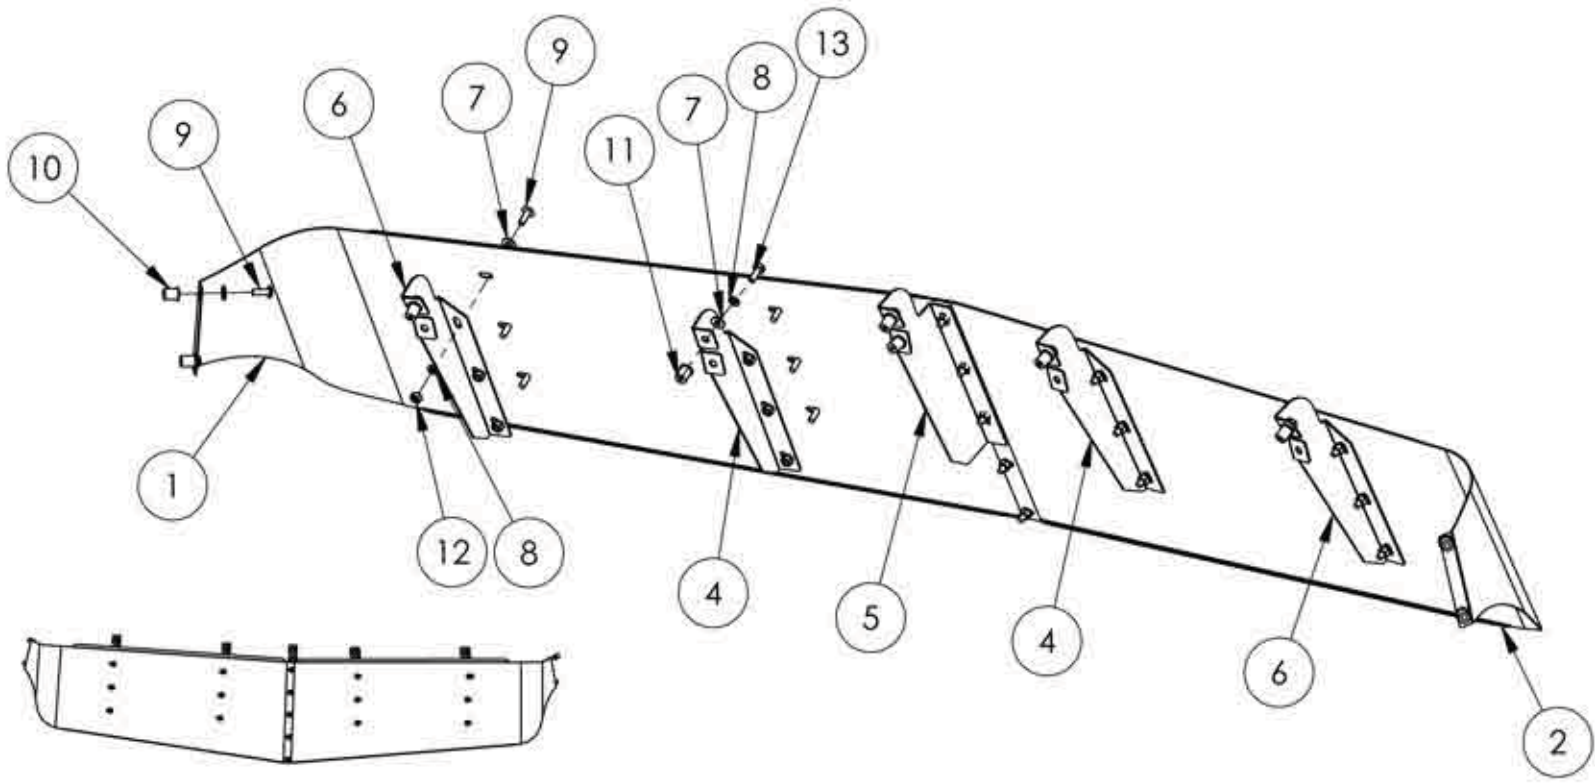

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	M7831001SG	SUN VISOR PANEL	1
2	M7831001SD	SUN VISOR PANEL	1
3	K7831001BH	HARDWARE KIT INCLUDES:	1
4	-	PR9831001-U02	2
5	-	PR9831001-C00	2
6	-	PR9831001-U01	2
7	-	FLAT WASHER 1/4"	27
8	-	LOCK WASHER 1/4" SS	23
9	-	TRUSS PHILIPS 1/4"-20NCX3/4"SS	21
10	-	LE.INSERT STL 1/4"-20NC X.160	4
11	-	WELL NUT 1/4"-20NC	6
12	-	HEX NUT 1/4-20NC	17
13	-	HEX. BOLT 1/4NC X 3/4"	6

TRUX ACCESSORIES

TITLE: SUN VISOR STERLING
9500 SERIE

SIZE: A DWG. NO. **TSUN-S1**

NAME	DATE	REV	DATE
DRAWN BY P.W.	09-08-2007	PH1	-
SCALE: 1:8	WEIGHT: LBS	SHEET: 1 OF 1	