




## TFEN-A56 – Applies to all Poly Inserts


### Assembly Instructions Instructions de Montage

NEOPRENE INSERT  
INSERT NEOPRENE

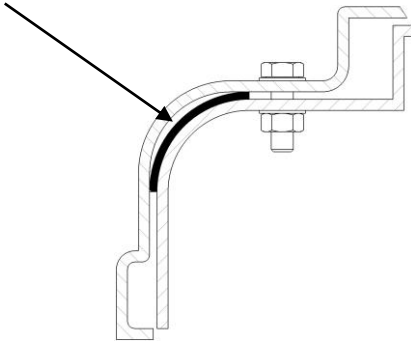

FIX SELF ADHESIVE NEOPRENE INSERT  
TO TR450 END PIECES AS SHOWN

FIXER L'INSERT NEOPRENE ADHESIVE  
AUX EXTREMITES DE LA PIECE TR450  
COMME INDIQUE

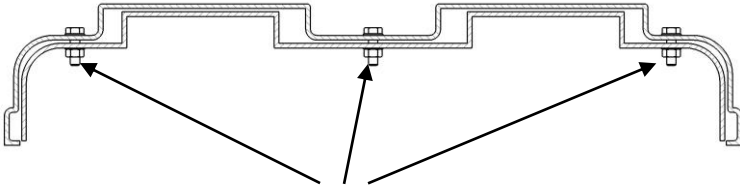

M6 x 20 BOLT / BOULON  
M6 NYLOC NUT / ECROU NYLOC  
M6 x 25 WASHER / RONDELLE

