




Installation Instructions

Important Notice: To validate the warranty you must follow the instruction.

①


Use provided template for drilling holes.

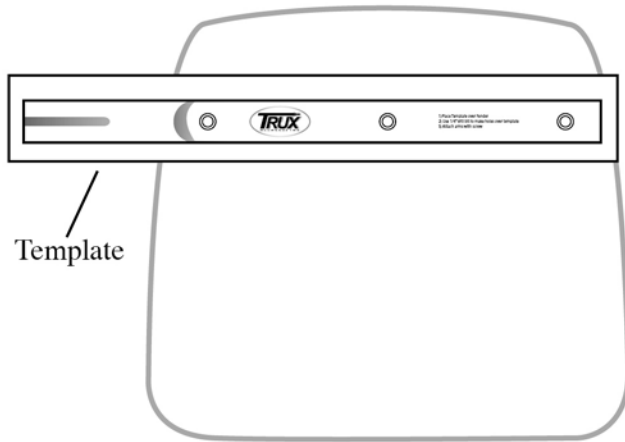

Template

②

Place tube arms to fenders as shown.
Attach bolts with strap on the underside of fender.

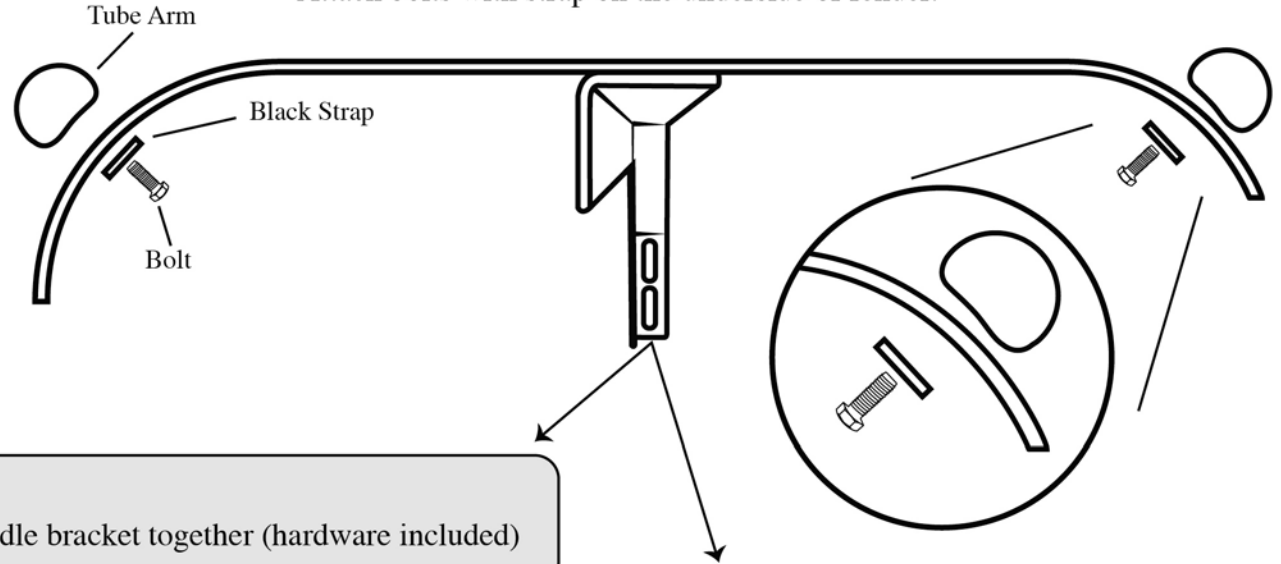

Tube Arm


Black Strap

Bolt

Optional:
Bolt fender and middle bracket together (hardware included)

③

Mount fender to truck's chassis as shown by using 3/4" inch coarse threaded bolts provided.

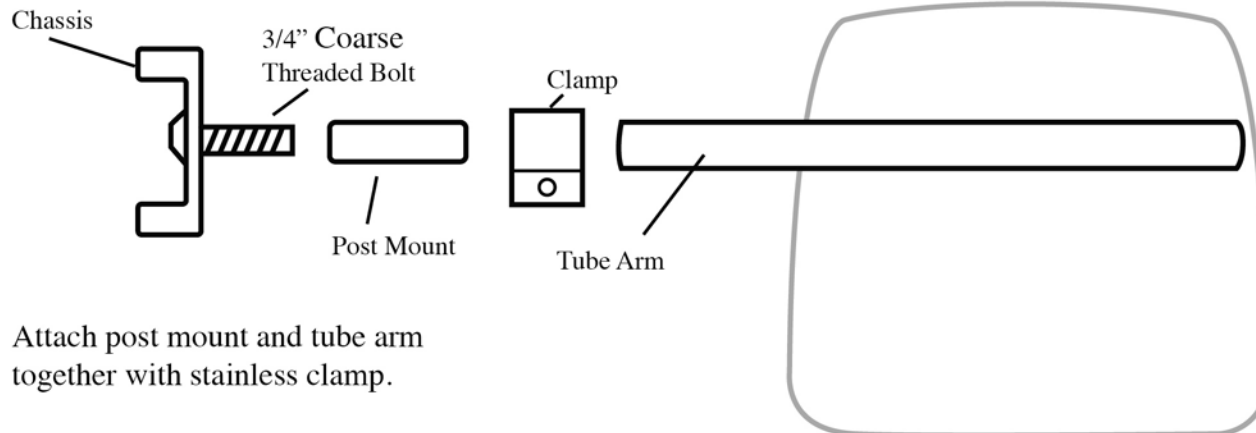

Chassis


3/4" Coarse
Threaded Bolt

Post Mount

Clamp

Tube Arm

Attach post mount and tube arm
together with stainless clamp.

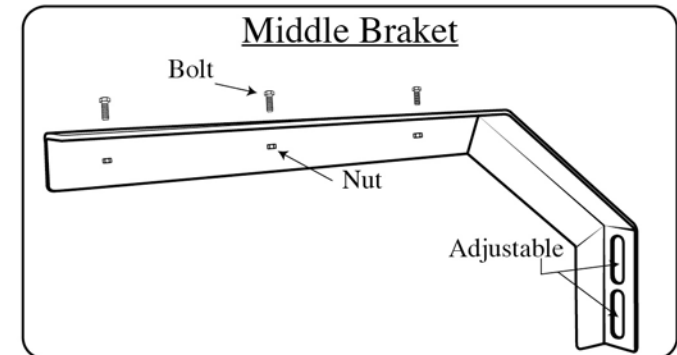

Middle Bracket

Bolt

Nut

Adjustable