


Installation Instructions

Important Notice: To validate the warranty you must follow the instruction.

①



Use provided template for drilling holes.

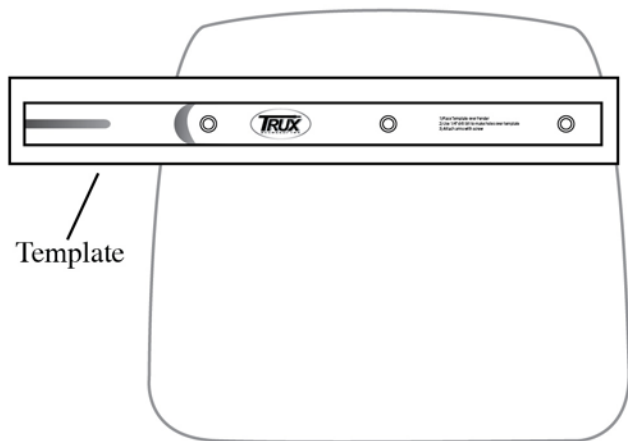

Bolt fender and middle bracket together (hardware included)


②

Place tube arms to fenders as shown.
Attach bolts with strap on the underside of fender.

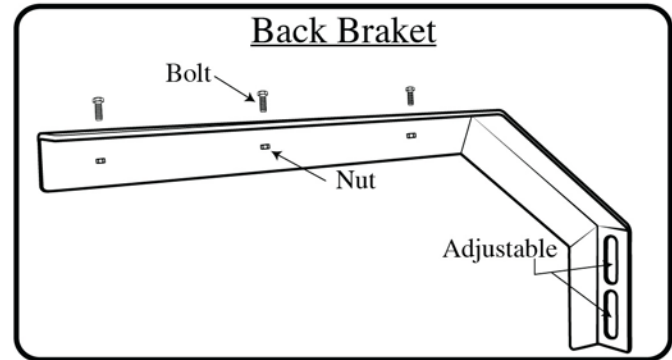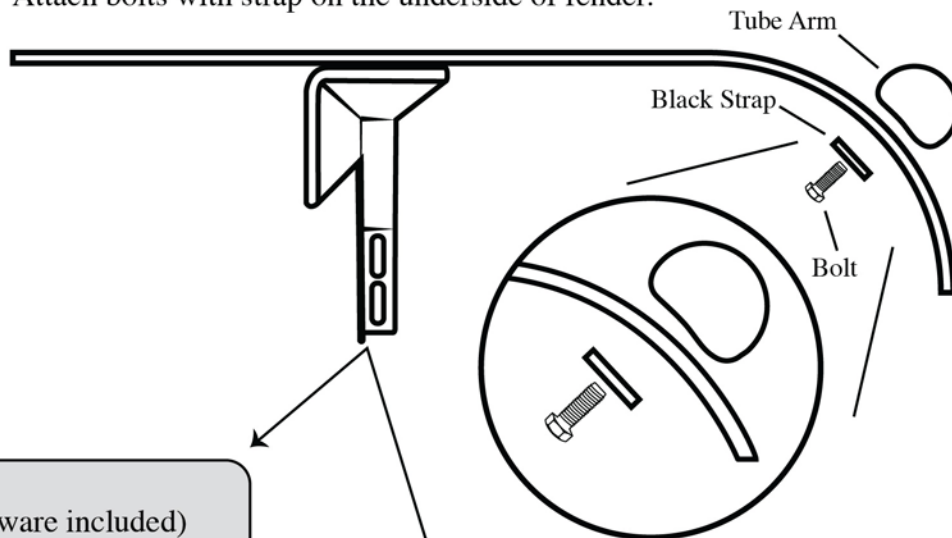

③

Mount fender to truck's chassis as shown by using 3/4" inch coarse threaded bolts provided.

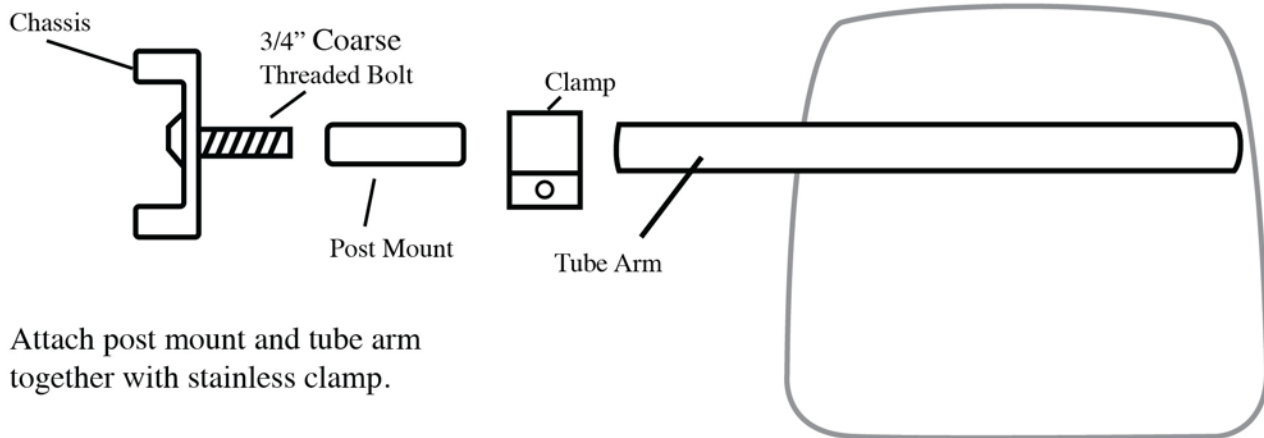

Attach post mount and tube arm together with stainless clamp.