


Installation Instructions

Important Notice: To validate the warranty you must follow the instruction.


①

Use provided template for drilling holes.

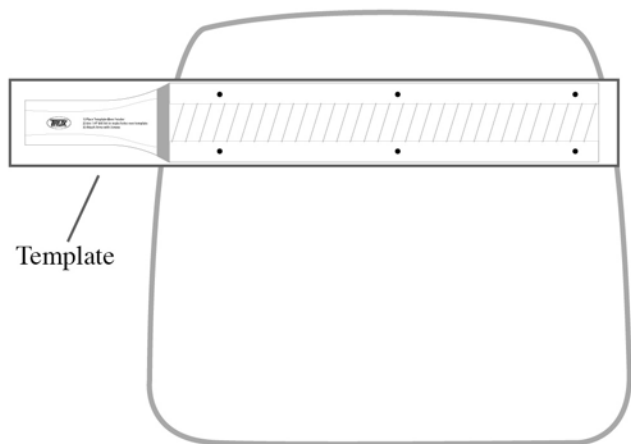


②

Place stainless steel arms to fenders as shown. Attach bolts with strap on the underside of fender.

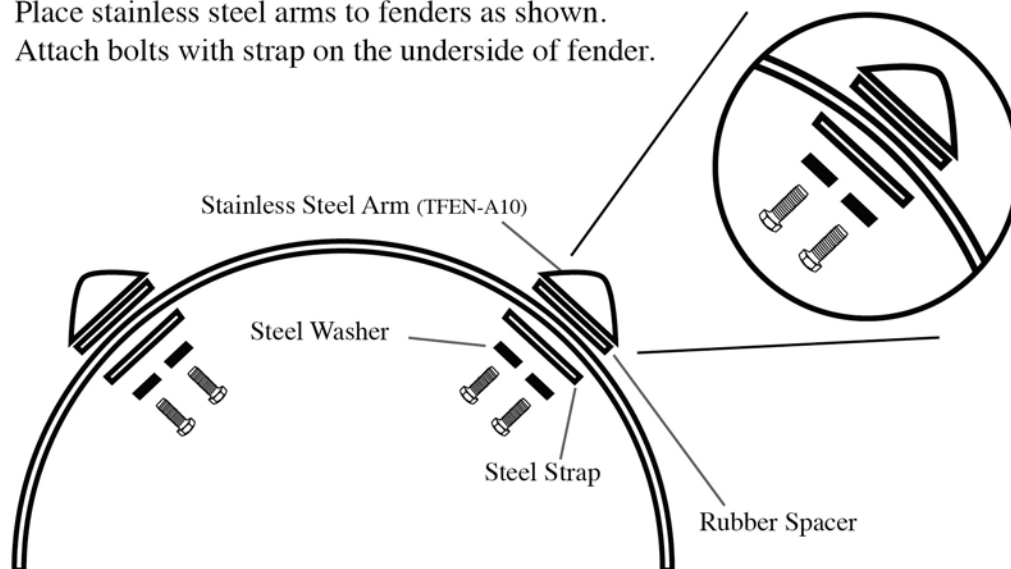

③

Mount fender to truck's chassis as shown by using 3/4" inch fine pitch threaded bolts provided.

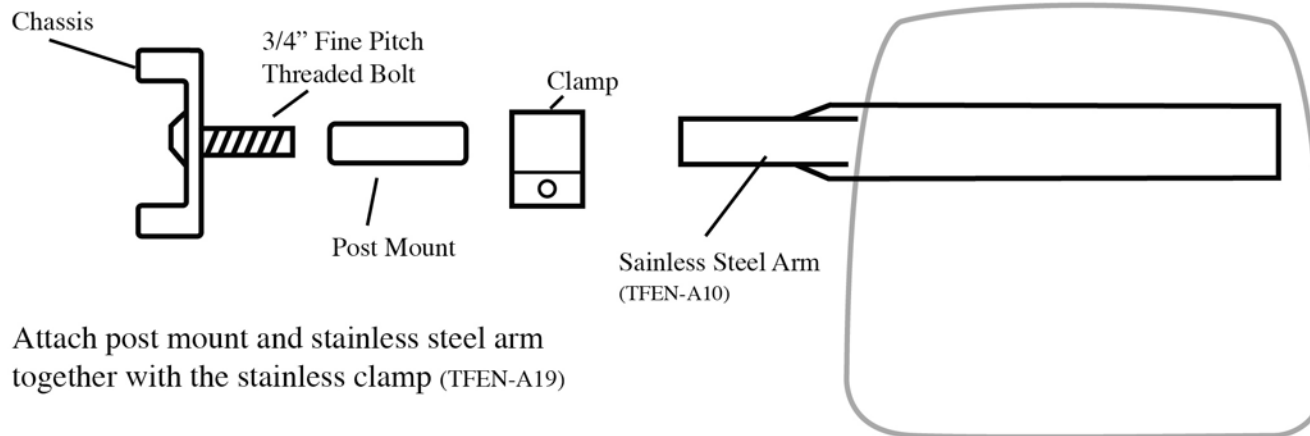

Attach post mount and stainless steel arm together with the stainless clamp (TFEN-A19)