

BEFORE BEGINNING INSTALLATION, READ ALL INSTRUCTIONS

INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR, BUT REMAIN THE EXISTING BOLTED BRACKETS ONTO THE CAB.
- 2- IF THE MIRROR IS FIXED ON THE CAB, REMOVE THE MIRROR.
- 3- INSTALL THE SUPPLIED BRACKETS ONTO THE EXISTING BRACKETS ON THE CAB.
- 4- TEMPORARILY INSTALL THE SUN VISOR ONTO THE CAB.
- 5- USING THE SUN VISOR, MARK HOLES ON BOTH ENDS OF SUN VISOR (IF FACTORY SUN VISOR PREVIOUSLY INSTALL) SKIP TO STEP #7.

ATTENTION


REMOVE SUN VISOR TO PREVENT DAMAGE

- 6- DRILL THE PREVIOUSLY MARKED HOLES AT 1/2 IN. DIA.
- 7- INSERT THE WELLNUTS.
- 8- IF WITHOUT LIGHTS; SKIP TO STEP #12.
- 9- INSTALL THE LIGHTS ON SUN VISOR, CONNECT THE LIGHTS AND DIRECT WIRE TOWARDS CENTER.
- 10- INSTALL THE SUN VISOR ON THE CAB, AS ILLUSTRATED.

CAUTION

IT IS THE RESPONSIBILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.

- 11- CONNECT LIGHTS HARNESS TO THE TRUCK.
- 12- REINSTALL THE SUN VISOR ON THE CAB, AS ILLUSTRATED.
- 13- REINSTALL THE MIRROR IF PREVIOUSLY REMOVED AT STEP #2.
- 14- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

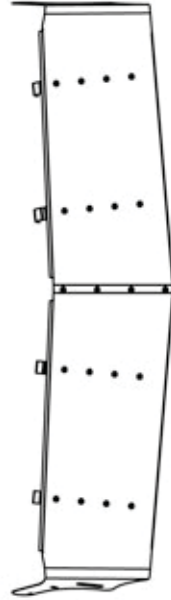

TRUX accessories

TITLE:

SUN VISOR FREIGHTLINER FIBER ROOF
GANGS. SERIE CLASSIC, CLASSIC XL, FLD112 & 120

SIZE DWG. NO.

A

TSUN-F3 & F4

NAME

P.W.

DATE

02-10-2008

REV

PH1


DATE

-

SCALE: 1:24

WEIGHT: LBS

SHEET: 1 OF 1

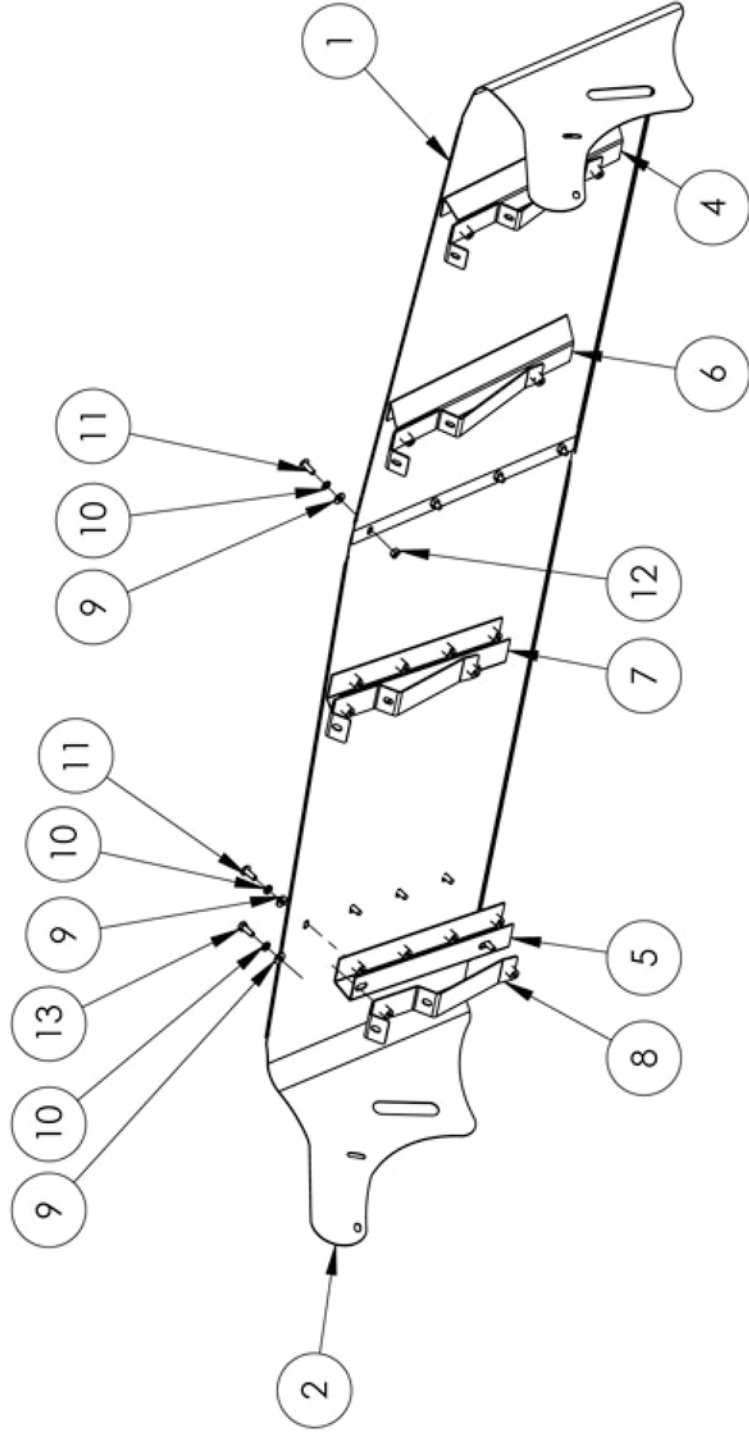

Short ones out

ITEM NO.	PART NO.	PART NO.	PART NO.	PART NO.	PART NO.	DESCRIPTION	QTY
1	M7331020SD	M7331018SD	M7331031SD	M7331039SD		SUN VISOR PANEL	1
2	M7331020SG	M7331018SG	M7331031SG	M7331039SG		SUN VISOR PANEL	1
3	K7331027-BH	-	-	-		HARDWARE KIT INCLUDES:	
4	-	-	-	-		PR9331027-D01	4
5	-	-	-	-		PR9331027-G01	4
6	-	-	-	-		PR9331027-D02	4
7	-	-	-	-		PR9331027-G02	4
8	-	-	-	-		PR9331027-U01	4
9	-	-	-	-		FLAT WASHER 1/4"	28
10	-	-	-	-		LOCK WASHER 1/4" SS	28
11	-	-	-	-		TRUSS PHILIPS 1/4"-20NCX3/4"SS	20
12	-	-	-	-		HEX NUT 1/4"-20NC	4
13	-	-	-	-		HEX. BOLT 1/4NC X 3/4"	8

TRUX accessories

TITLE:
SUN VISOR FREIGHTLINER FIBER ROOF
 GANGS. SERIE CLASSIC, CLASSIC XL, FLD112 & 120

SIZE DWG. NO.
A

NAME DATE REV DATE
 DRAWN BY P.W. 02-10-2008 PH1
 SCALE: 1:10 WEIGHT: LBS SHEET: 1 OF 1

TSUN-F3 & F4