

ITEM NO.	PART NO.	DESCRIPTION	QTY
1	M7231019SG	PARE-SOLEIL	1
2	M7231019SD	PARE-SOLEIL	1
3	K7231019BH	HARDWARE KIT INCLUDES:	-
4	-	PR9231019-C00	1
5	-	PR9231019-D00	1
6	-	PR9231019-G00	1
7	B-W10OD12S	FLAT WASHER ID#10 X OD 1/2" SS	9
8	B-W14S	FLAT WASHER 1/4	10
9	-	TRUSS PHILIPS 10-32NFSS x1/2" LG	9
10	-	TRUSS PHILIPS 1/4-20NCX1"SS	4
11	B-IRAS14-20X160	LF,INSERT STL 1/4"-20NC X.160	4
12	B-LW14S	LOCK WASHER 1/4" SS	6
13	B-HN14-20S	HEXAGONAL NUT 1/4"-20NC SS	6
14	B-HB14-20X1S	HEX BOLT 1/4"-20NCX1" SS	6
15	B-NL10-32S	NYLON LOCK NUT #10-32 SS	9


## TRUX ACCESSORIES

TITLE: SUN VISOR  
 KENWORTH T680-T880 2012&UP -W990 2019 & UP  
 DAY CAB WITH OEM METAL SUN VISOR

SIZE DWG. NO.

**A TSUN-K21**

NAME	DATE	REV	DATE
DRAWN BY P.W.	30-03-2014	PH1	-
SCALE: 1:8	WEIGHT: LBS	SHEET: 1 OF 1	

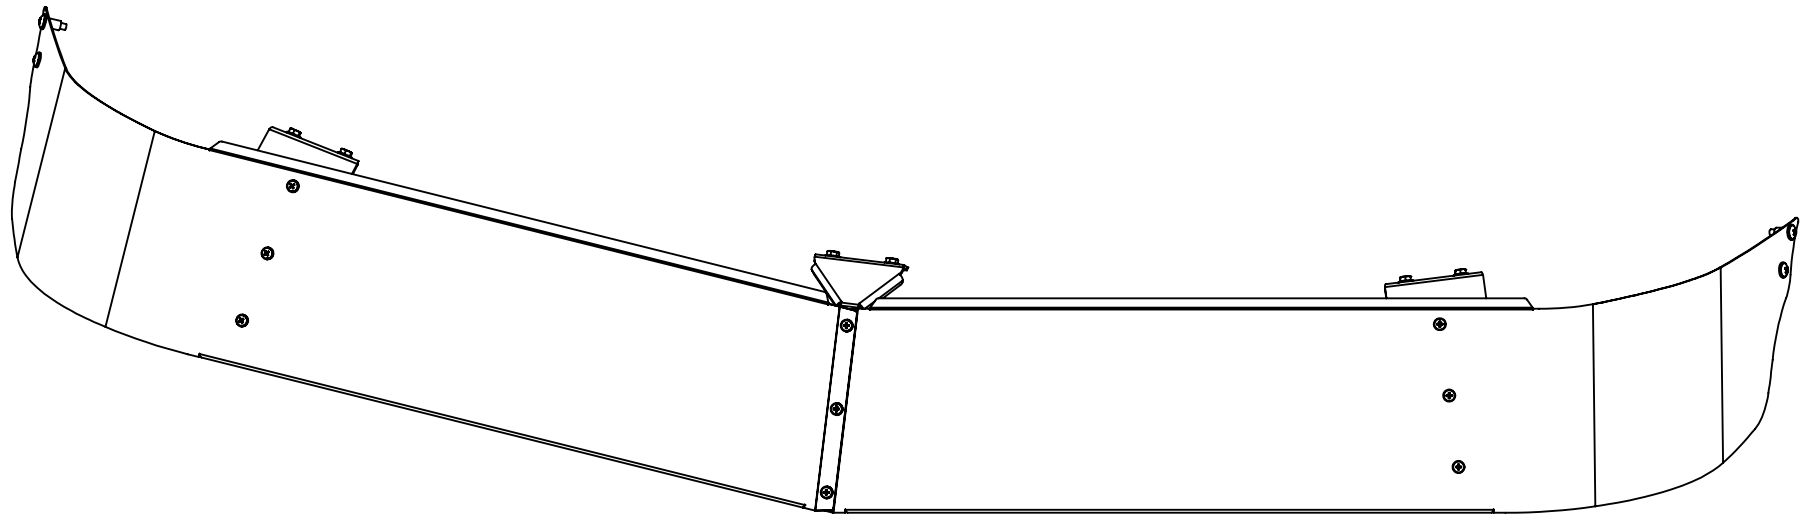

**DO NOT REMOVE THE SPV PROTECTION  
UNTILL THE INSTALLATION IS FINISHED**

**READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION**

INSTALLATION INSTRUCTIONS

- 1- REMOVE EXISTING SUN VISOR.
- 2- ON A TABLE PREASSEMBLE THE SUN VISOR PANEL & THE BRACKETS
- 3- TEMPORARILY INSTALL THE SUN VISOR ON THE EXISTING BRACKETS USING HARDWARE AS ILLUSTRATED.
- 4- MARK BOTH ENDS HOLES OF SUN VISOR ON CAB.

**ATTENTION**

**REMOVE SUN VISOR BEFORE DRILLING TO PREVENT DAMAGE**

- 5- DRILL MARKED HOLES AT 25/64" (.390625") DIA.
- 6- INATSLL METAL INSERT.
- 7- REINSTALL THE SUN VISOR ON THE CAB.
- 8- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

**TRUX ACCESSORIES**

TITLE: SUN VISOR  
KENWORTH T680-T880 2012&UP -W990 2019 & UP  
DAY CAB WITH OEM METAL SUN VISOR

SIZE DWG. NO.

**A TSUN-K21**

NAME	DATE	REV	DATE
DRAWN BY P.W.	30-03-2014	PH1	-
SCALE: 1:8	WEIGHT: LBS	SHEET: 1 OF 1	