

ITEM NO.	PART NO.	PART NO.	PART NO.	DESCRIPTION	QTY
1	M7131008SD	M7131011SD	M7131012SD	SUN VISOR PANEL	1
2	M7131008SG	M7131011SG	M7131012SG	SUN VISOR PANEL	1
3	<b>K7131002BH</b>	-	-	HARDWARE KIT INCLUDES	1
4	-	-	-	PR9131002-C00	1
5	-	-	-	PR9131002-D00	1
6	-	-	-	PR9131002-G00	1
7	-	-	-	WELL NUT 1/4NC	12
8	-	-	-	LOCK WASHER 1/4" SS	11
9	-	-	-	FLAT WASHER 1/4"	23
10	-	-	-	TRUSS PHILIPS 1/4"X 3/4"SS	15
11	-	-	-	HEX. BOLT 1/4NC X 3/4"	8
12	-	-	-	HEX NUT 1/4-20NC	11

## TRUX ACCESSORIES

TITLE:  
SUN VISOR LOW ROOF  
PETERBILT 379 - 2005 & UP


SIZE DWG. NO.  
**A** TSUN-PET379L4 TSUN-PET379L4L TSUN-PET379L4G

NAME	DATE	REV	DATE
DRAWN BY P.W.	24-09-2008	PH1	-

SCALE: 1:16

WEIGHT: LBS

SHEET: 1 OF 1

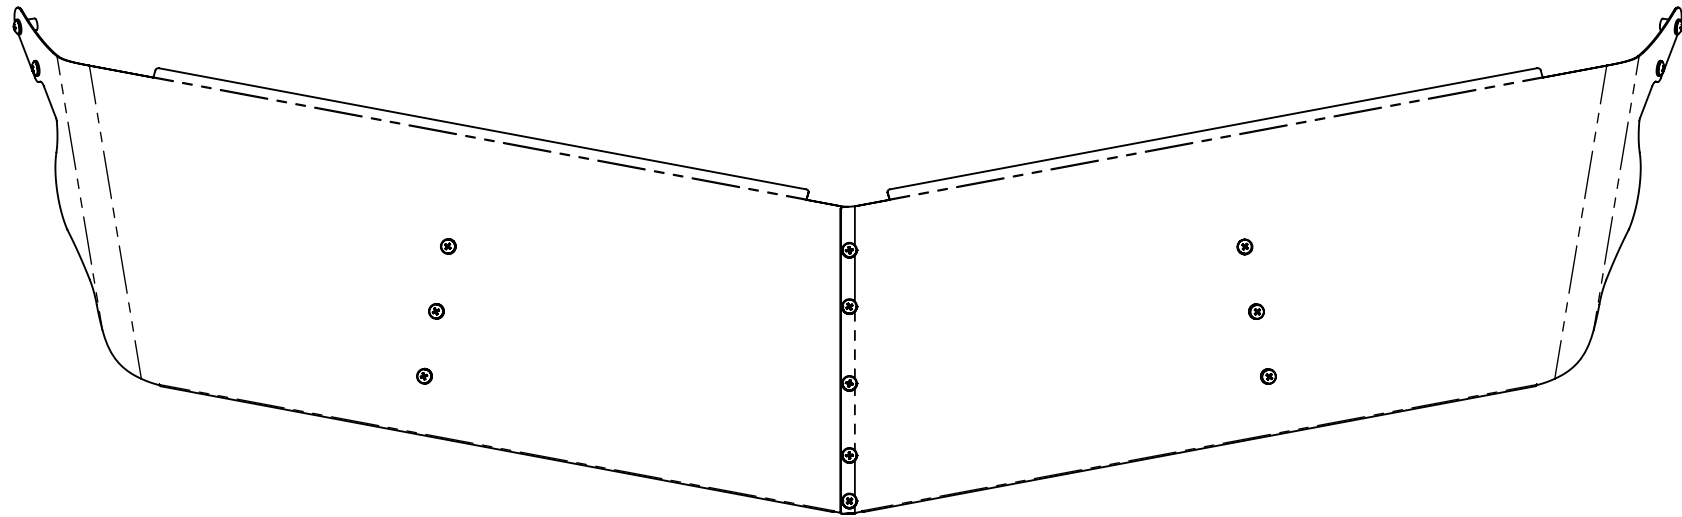

FRONT VIEW

**READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION**

INSTALLATION INSTRUCTIONS

- 1- REMOVE THE EXISTING SUN VISOR.
- 2- REDRILL EXISTING HOLES TO 1/2 in. AND INSERT WELLNUTS.
- 3- INSTALL THE BRACKETS ONTO THE CAB.
- 4- TEMPORARILY INSTALL THE SUN VISOR AS ILLUSTRATED
- 5- USING THE SUN VISOR, MARK OUT HOLES ON BOTH ENDS OF SUN VISOR.

**CAUTION**


**REMOVE SUN VISOR BEFORE DRILLING TO PREVENT DAMAGE**

- 6- DRILL MARKED HOLES AT 1/2 IN. DIA.
- 7- INSERT THE WELLNUTS.
- 8- IF WITHOUT LIGHTS; SKIP TO STEP #11.
- 9- INSTALL THE LIGHTS ON SUN VISOR
- 10- CONNECT THE LIGHTS AND DIRECT WIRE TOWARDS CENTER.
- 11- REINSTALL THE SUN VISOR ON THE CAB.

**CAUTION**

**IT IS THE RESPONSIBILITY OF THE INSTALLER TO PLAN AHEAD THE ADEQUATE ELECTRICAL CONNECTION ACCORDING TO THE STANDARDS OF THE TRUCK MANUFACTURER AND DOT REGISTRATION.**

- 12- CONNECT LIGHTS HARNESS TO THE TRUCK.
- 13- TIGHTEN ALL BOLTS AND SCREWS FIRMLY.

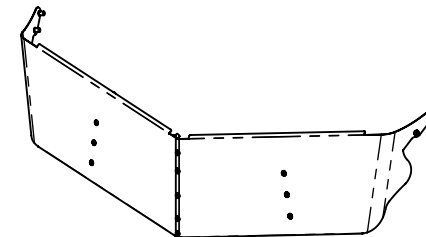

**TRUX ACCESSORIES**

TITLE:  
SUN VISOR LOW ROOF  
PETERBILT 379 - 2005 & UP

SIZE	DWG. NO.
<b>A</b>	<b>TSUN-PET379L4 TSUN-PET379L4L TSUN-PET379L4G</b>

	NAME	DATE	REV	DATE
DRAWN BY	P.W.	24-09-2008	PH1	-
SCALE: 1:24		WEIGHT: LBS		SHEET: 1 OF 1